




# **ASSEMBLY INSTRUCTIONS**

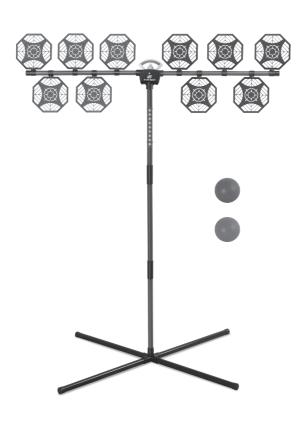

### **ASSEMBLY TIPS:**

- 1 Please read the instructions carefully, and follow all assembly, operation or safety instructions properly in order to avoid damage or injury.
- 2 Some figures or drawings may not look exactly like your product. Please read and understand the text before beginning each assembly step.

### **NOTICE!**

- 1 Check all contents are included before assembly.
- 2 Always assemble and disassemble the product under adult supervision.
- 3 Check the equipment each Time before use.
- 4 Any breakage found on the product, please stop assembling or disassembling it.



WARNING: Adult Assembly Required.



### MARNING:


CHOKING HAZARD -- This item contains small parts. Not suitable for children under 3 years.

## **PARTS LIST**


1	2	3
Tube 1 4pcs	Tube 2 2pcs	Tube With Magnet 2pcs
1	5	6
Scorer Tube 1pc	5 Ways Connector 1pc	Connector With Springs 1pc
7	8	9
"I" Connector 2pcs	Red Target 5pcs	Blue Target 5pcs
10	11	
Red Soft Ball 2pcs	Ground Peg 4pcs	

### **ASSEMBLY INSTRUCTIONS**

#### FIG.1

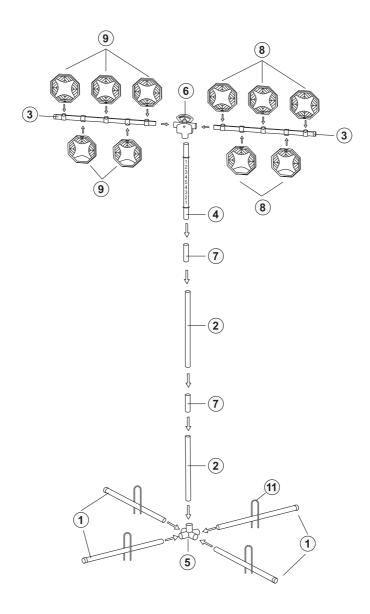


### **GAME RULES**

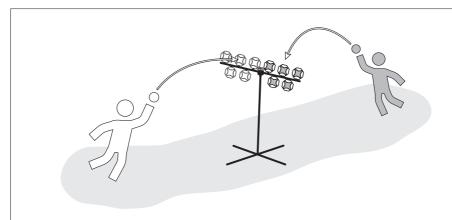


PLAYERS STAND 6FT ~ 12FT AWAY FROM THE TARGET FRAME, OPPOSITE TO EACH OTHER.



 PLAYERS DECIDE THE ORDER FIRST AND TAKE TURNS TO TOSS THE BALL.
PLAYER WHO KNOCKS DOWN ALL THE TARGETS FIRST WINS THE GAME.



AND THE PLAYER WHO WINS FIVE GAMES FIRST WINS THIS COMPETITION.

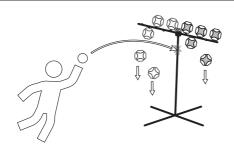

ATTENTION: THE CAKE TARGETS THAT FALL OFF DUE TO HITTING THE FRAME DON'T COUNT.