




www.sportland.com.cn

All-in Cart

#17907

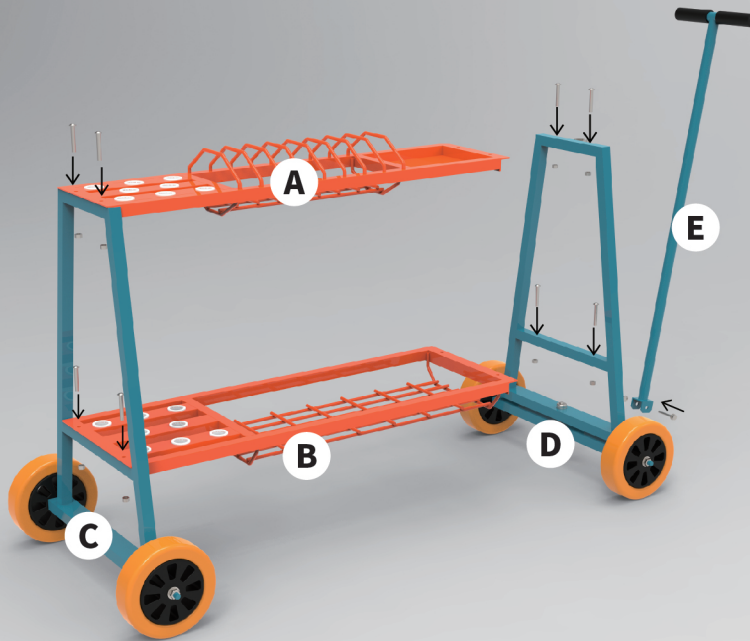

1. Put part B on Part C at 2 holes position, insert the bolts & spacers and fix the nuts, but do not tighten the nuts.
2. Put part B on Part D at 2 holes position, insert the bolts & spacers and fix the nuts, also do not tighten the nuts.
3. Repeat step 1 and step 2, and install part A onto Part C and Part D.
4. Tighten all bolts.
5. Put part E (Handle) at the bottom of clip position, then insert and tighten the bolts & spacers, firm the handle on the buckle position.

